


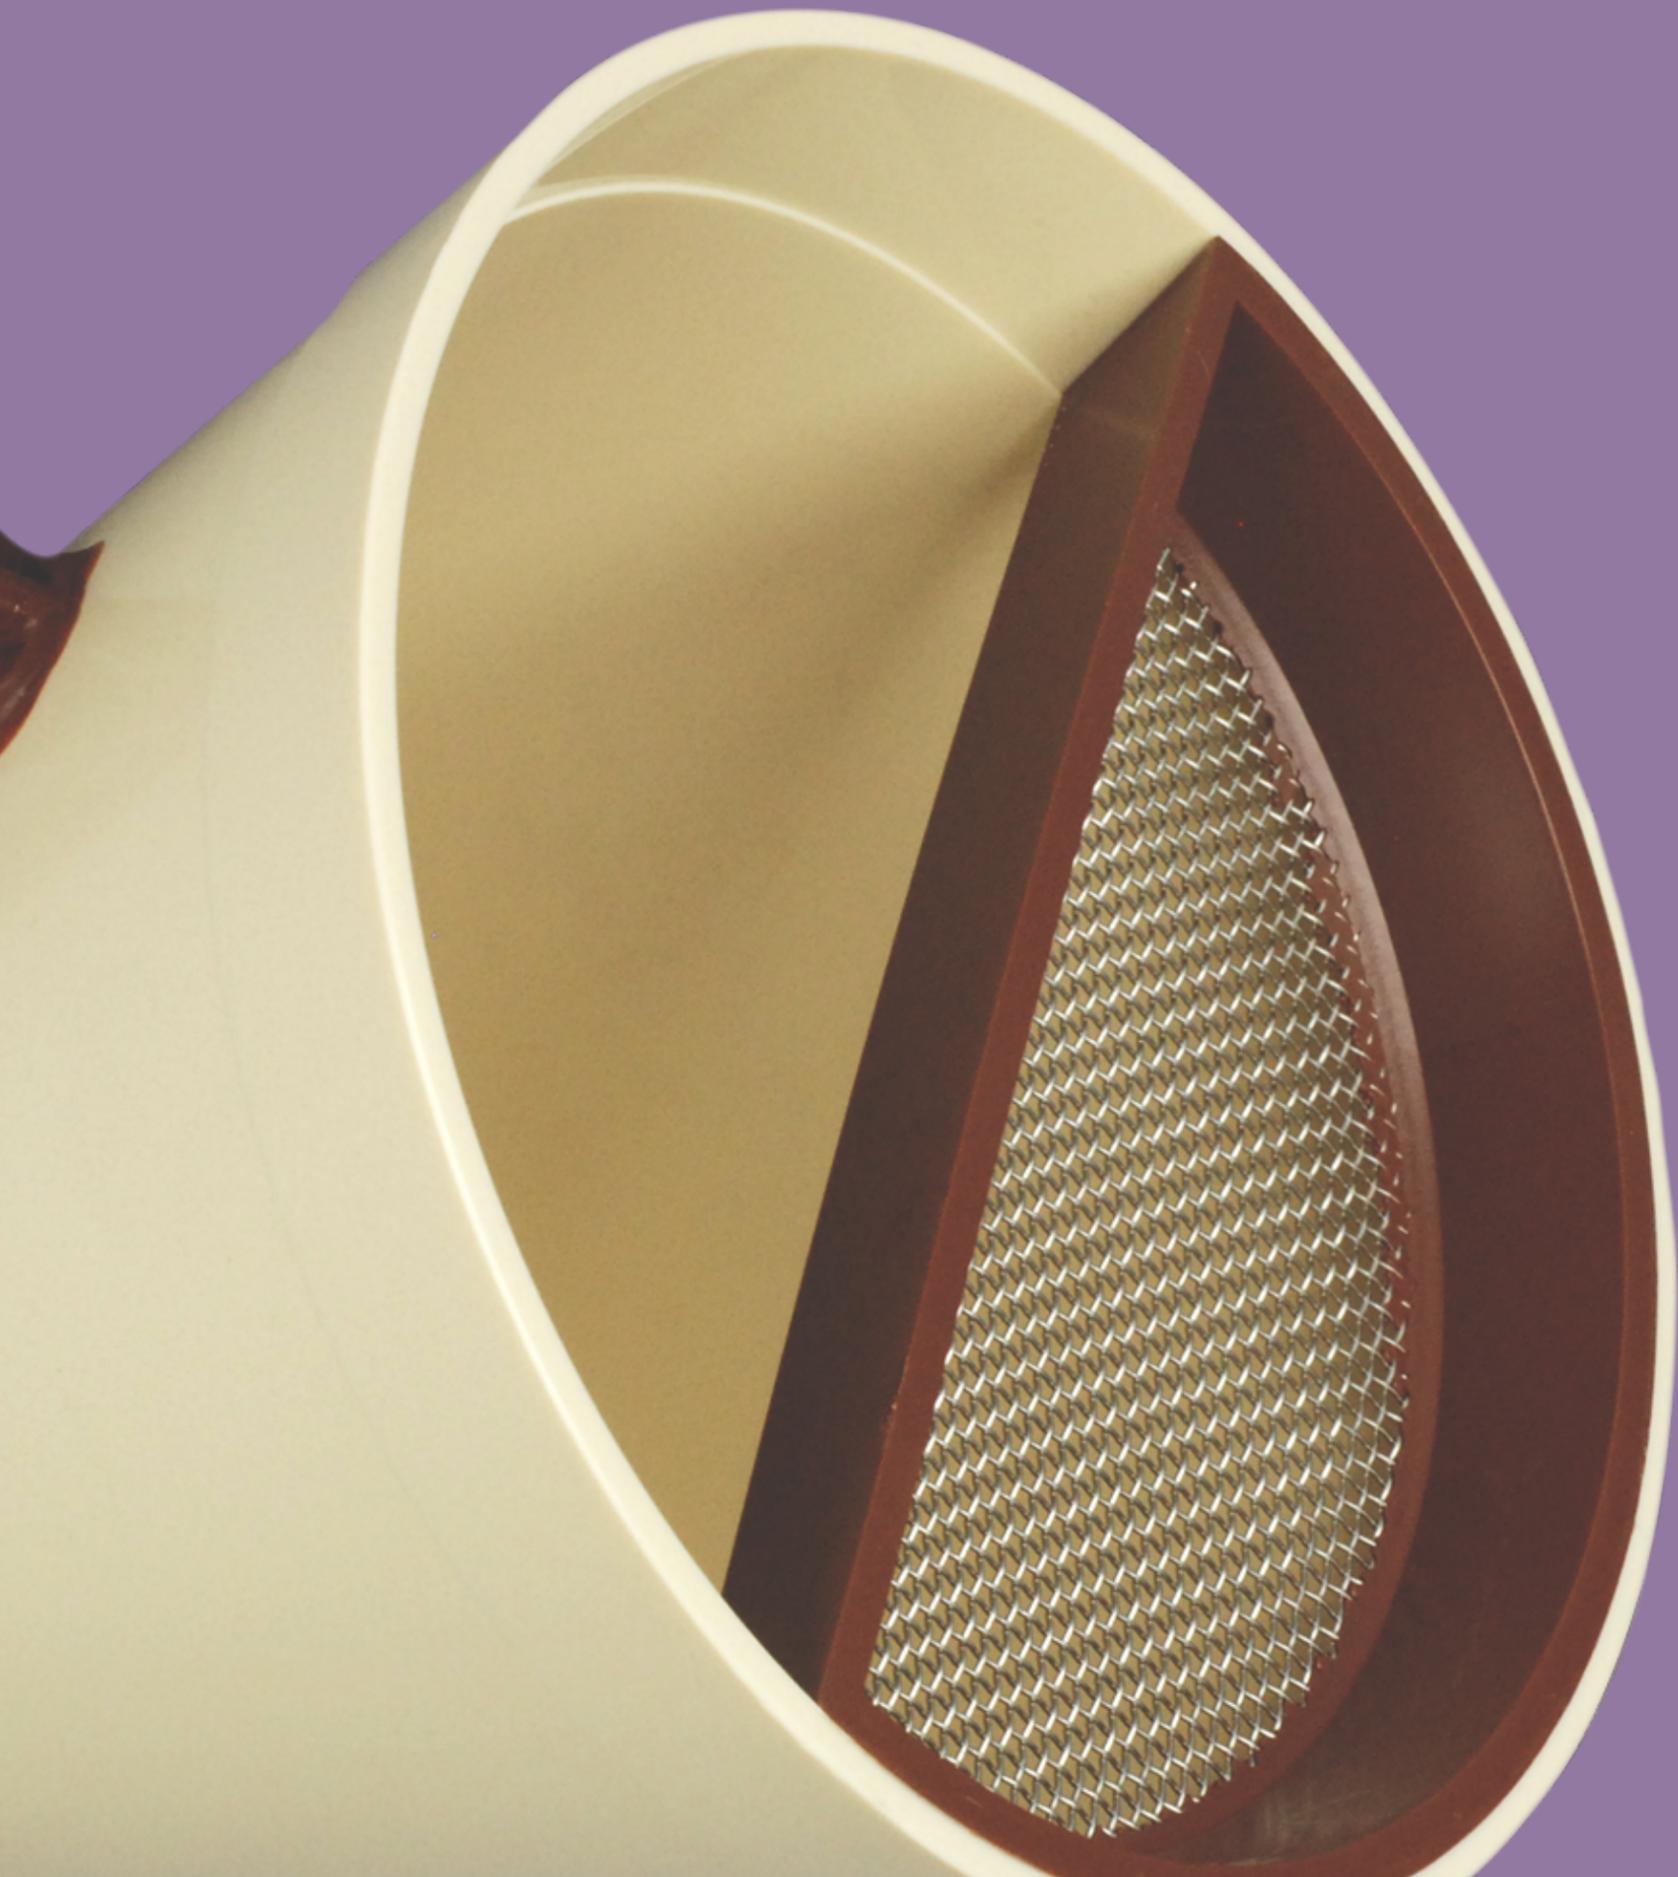

FORDIA®

GUIDE TO MIXING DRILLING FLUID ADDITIVES

Sandy Ground



INTRODUCTION

Drilling fluid additives have been developed to help improve performance of drilling operations, especially in challenging ground conditions.


These additives provide many benefits when used while drilling in sandy soil, a type of ground condition that makes core retrieval difficult.

This type of ground includes:

- Sand
- Gravel
- Cobbles and pebbles

The use of drilling fluid additives in sandy soil :

- Builds a matrix tying sands and gravels together, thereby stabilizing the borehole.
- Can effectively stop shifting sands from collapsing into the bore hole.
- Can provide up to 100% CORE RECOVERY under extreme conditions.
- Eliminates the need to use Bentonite, thus reducing disposal problems and immense transportation costs.
- Can increase productivity and profits.

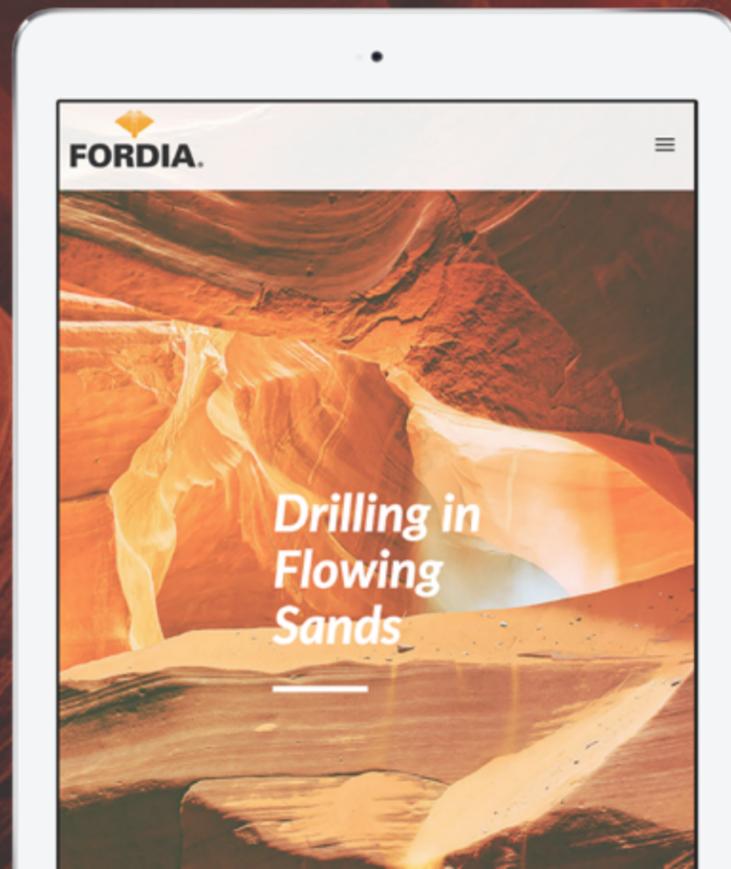

NEW

SOLUTIONS WEB PAGES

Great resource for you

Visit our solutions now

1. CHECK LIST

Make sure you have all the equipment you need before you start mixing. Use the checklist below.

Marsh cup



Marsh funnel



Pail



Wooden stick for pre-mixing



pH indicator strips



Mud mixer



2. ***MATEX DRILLING ADDITIVES***

Fordia provides drilling additive products from Matex, the leader in environmentally safe drilling fluids and lubricants. Matex products allow you to maximize returns by improving the productivity of your drilling operation and reducing costs.

The Matex product line includes drilling polymers, tool lubricants, thread compounds, and other drilling additive products

Matex products conform to non-polluting performance standards.



TORQUELESS

Torqueless is not just another soluble lube, it pays its way. Torqueless increase both bit-life and penetration rates during diamond drilling operations. It is based on an environmentally safe technology which has proven to be effective in lubricating downhole consumables for years.

[See the video](#)



<p>RECOMMENDED USE</p>	<p>The ULTIMATE diamond drilling product for in hole torque reducing, protecting against rod wear, preventing rust, and extending bit life.</p>
<p>DESCRIPTION</p>	<p>Torqueless is non-sheening when accidentally introduced into a water course. It inhibits swelling of clay like materials such as saprolites, talcs & kimberlites. Torqueless is extremely effective for lubricating and protecting against drill pipe wear during horizontal drilling. Torqueless protects drill rod wear when using wedges in diamond drilling.</p> <p>Torqueless increases tool joint life by reducing torque in the hole. Torqueless will enhance the effectiveness of powdered mud systems (bentonites, polymers, or pac's). Combined with the appropriate fluids and mixing systems, Torqueless will reduce stuck drill rods and lost casings in squeezing ground conditions.</p>
<p>SUGGESTION DOSAGE*</p>	<p>4-6 liters per 1000 liter of water (4-6 quarts per 250 gallons of water) depending upon drilling conditions and depth of hole.</p>



ECO-Friendly

SAND DRILL

A revolutionary generation of drilling additive that is a unique blend of synthetic polymers providing a drilling fluid capable of stabilizing the most difficult sand conditions.




<p>RECOMMENDED USE</p>	<p>Reduce the difficulties of drilling through sand, gravel and cobbles.</p>
<p>DESCRIPTION</p>	<p>Sand Drill is not affected by high water temperatures or salt water. It eliminates the need to use Bentonite, thus reducing disposal problems and transportation costs.</p> <p>Sand Drill and Torqueless work together without requiring a complicated multi-component mud system.</p> <p>This product should be pre-mixed with Torqueless before being introduced to fluid system.</p>
<p>SUGGESTION DOSAGE*</p>	<p>1-3 liters Sand Drill per 1000 liters of water (1-3 quarts Sand Drill per 250 gallons of water).</p>

MATEX products have been approved as environmentally safe, giving you one more reason to add them to your operations.



3. RECOMMENDED SET-UP

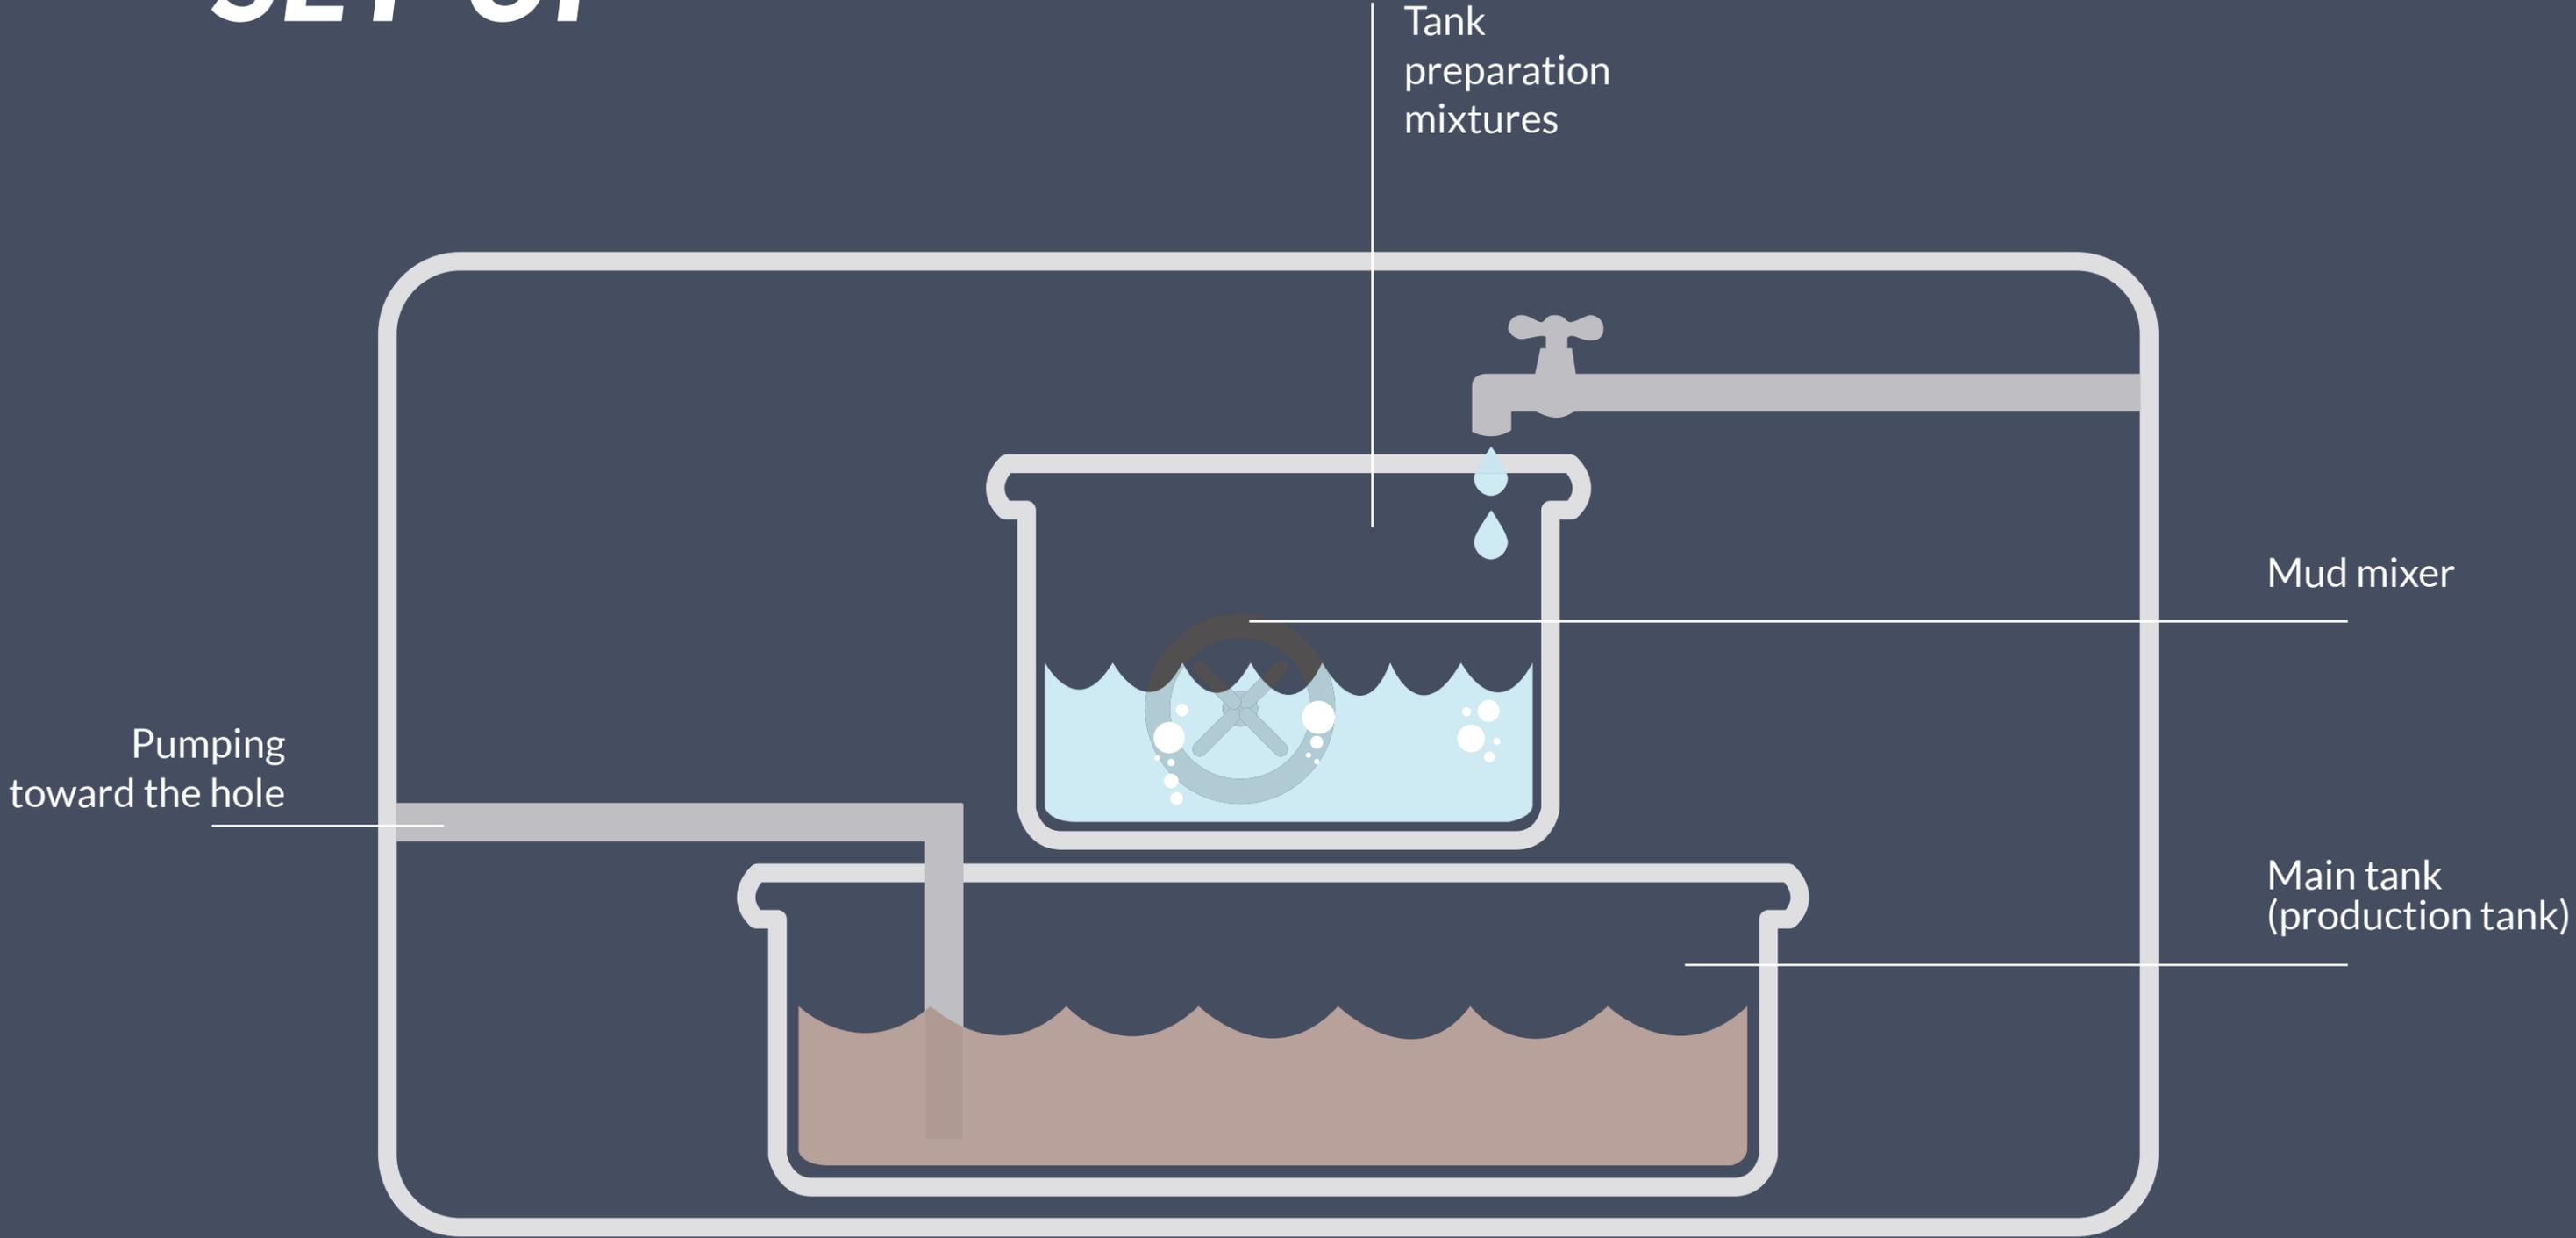



A. CHECK YOUR WATER pH LEVELS

Drilling fluid additives were developed to be mixed with water with a pH level from 8.5 to 10 in order for the required chemical reaction to occur and to provide a proper yield.

A pH of 7.0 is neutral, a pH lower than 7.0 is in the acidic range, and a pH higher than 7.0 is in the alkaline range. Most water sources range from 5.5 to 7.5 which is too low.

The easiest way to check pH level is to use a simple pH testing strip. If you find that the pH level is lower than 7, you will need to add pH10 or soda ash to the water.

If the water quality is poor or if the pH level is too high (between 11 and 14) then you may have to add sodium bicarbonate to lower the pH or find an alternate source of water.

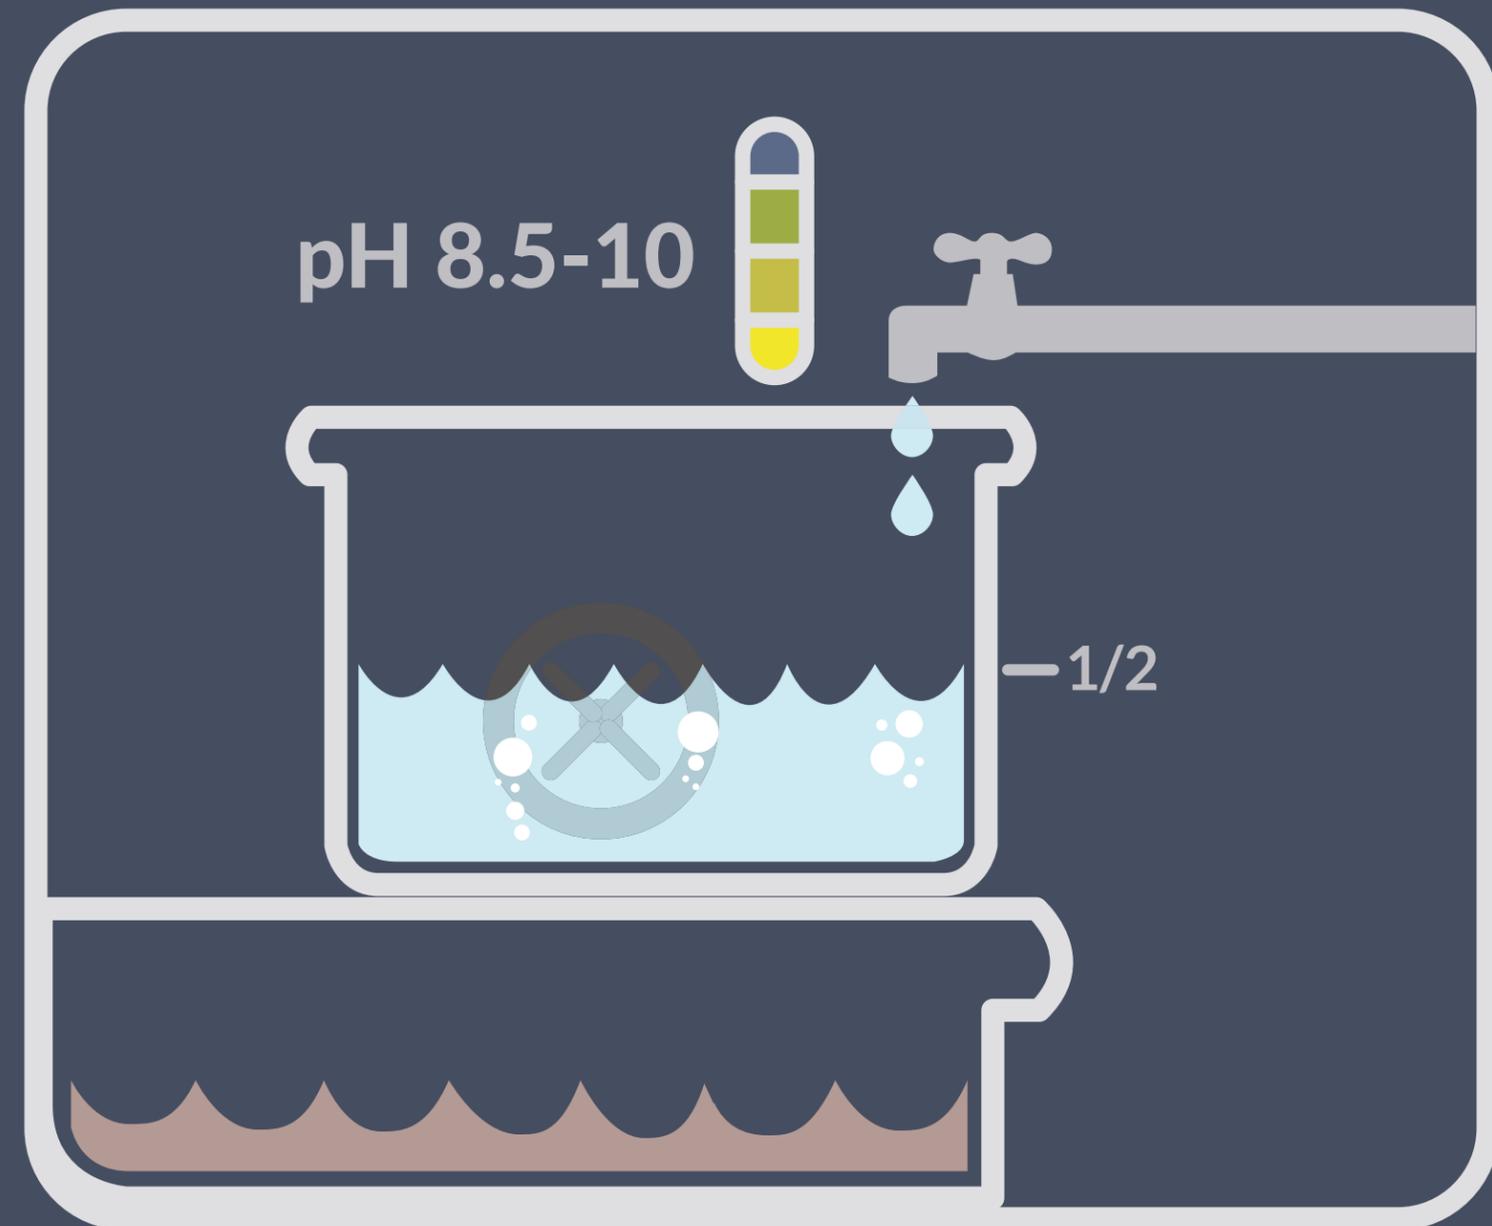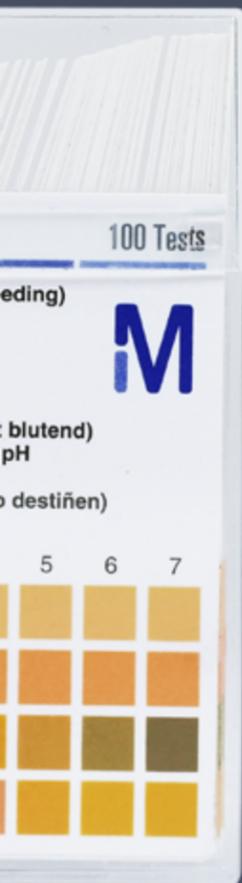

B. PRE-MIX THE ADDITIVES

Always thoroughly mix Sand Drill with TORQUELESS before adding to the water. This liquid encapsulates each individual grain of powder and greatly improves mixing. For a 1,000 liter tank, the following quantities are suggested.

	2 litres of Torqueless
	1 litre of Sand Drill

NOTE: These are recommended quantities but as ground and soil characteristics differ, this recipe may have to be adjusted for optimum performance. Contact our tech team for personalized advice.



C. ADD THE PRODUCTS TO MAKE THE DRILLING MUD

Once the pre-mixing has been done, slowly add the products into the vortex of water created by the mud mixer in mixing tank, which should be half full.




The mixing time will vary according to the temperature of the water. Colder water requires a longer mixing time.

In typical conditions, (between 10°C and 25°C), the average mixing time is 15 minutes for dry polymers.

The mixing tank can be filled with the required amount of water during the mixing time.

Once the mix is ready, it will remain in its blended form for several hours, sometimes up to several days, before separating.

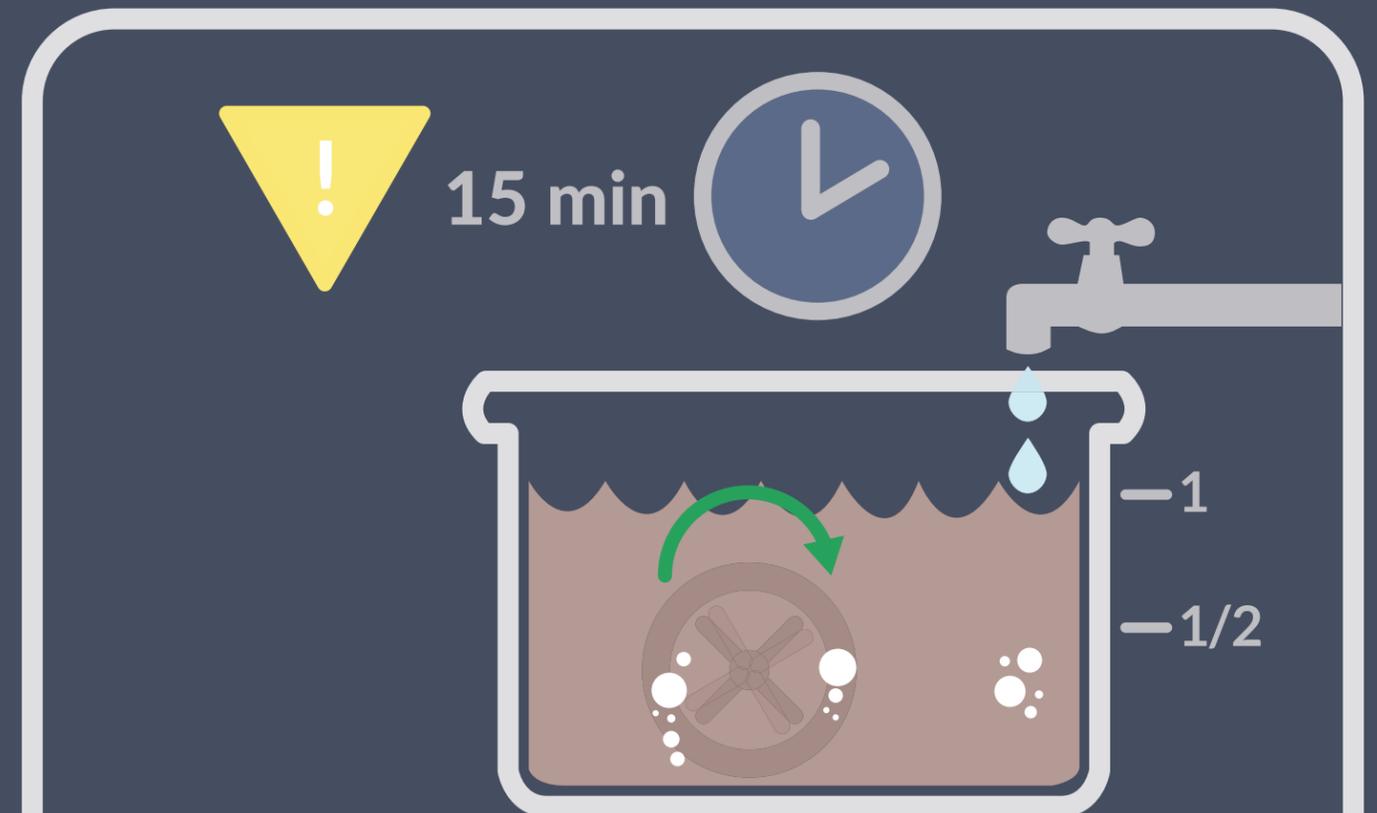

D. TESTING THE VISCOSITY

You must test your mix to make sure it has the right viscosity (consistency). We recommend using a Marsh cup and a Marsh funnel, the two best tools for this purpose.




Fill your funnel with mix until it reaches the line at the top of the funnel.

Make sure you pour the mix through the mesh part of the funnel so that larger bits of unmixed product do not clog up the bottom of the funnel. This would result in an inaccurate measure of the viscosity.



Place your finger over the narrow bottom of the funnel to keep the mix from coming out. Get your timer ready and remove your finger from the spout. You will be measuring how long it takes for the mix


to come out of the Marsh funnel and fill the Marsh cup. Each second counts as one unit of measure of viscosity. The level of viscosity is equal to the number of seconds it takes to fill the Marsh cup up to the line at the top.

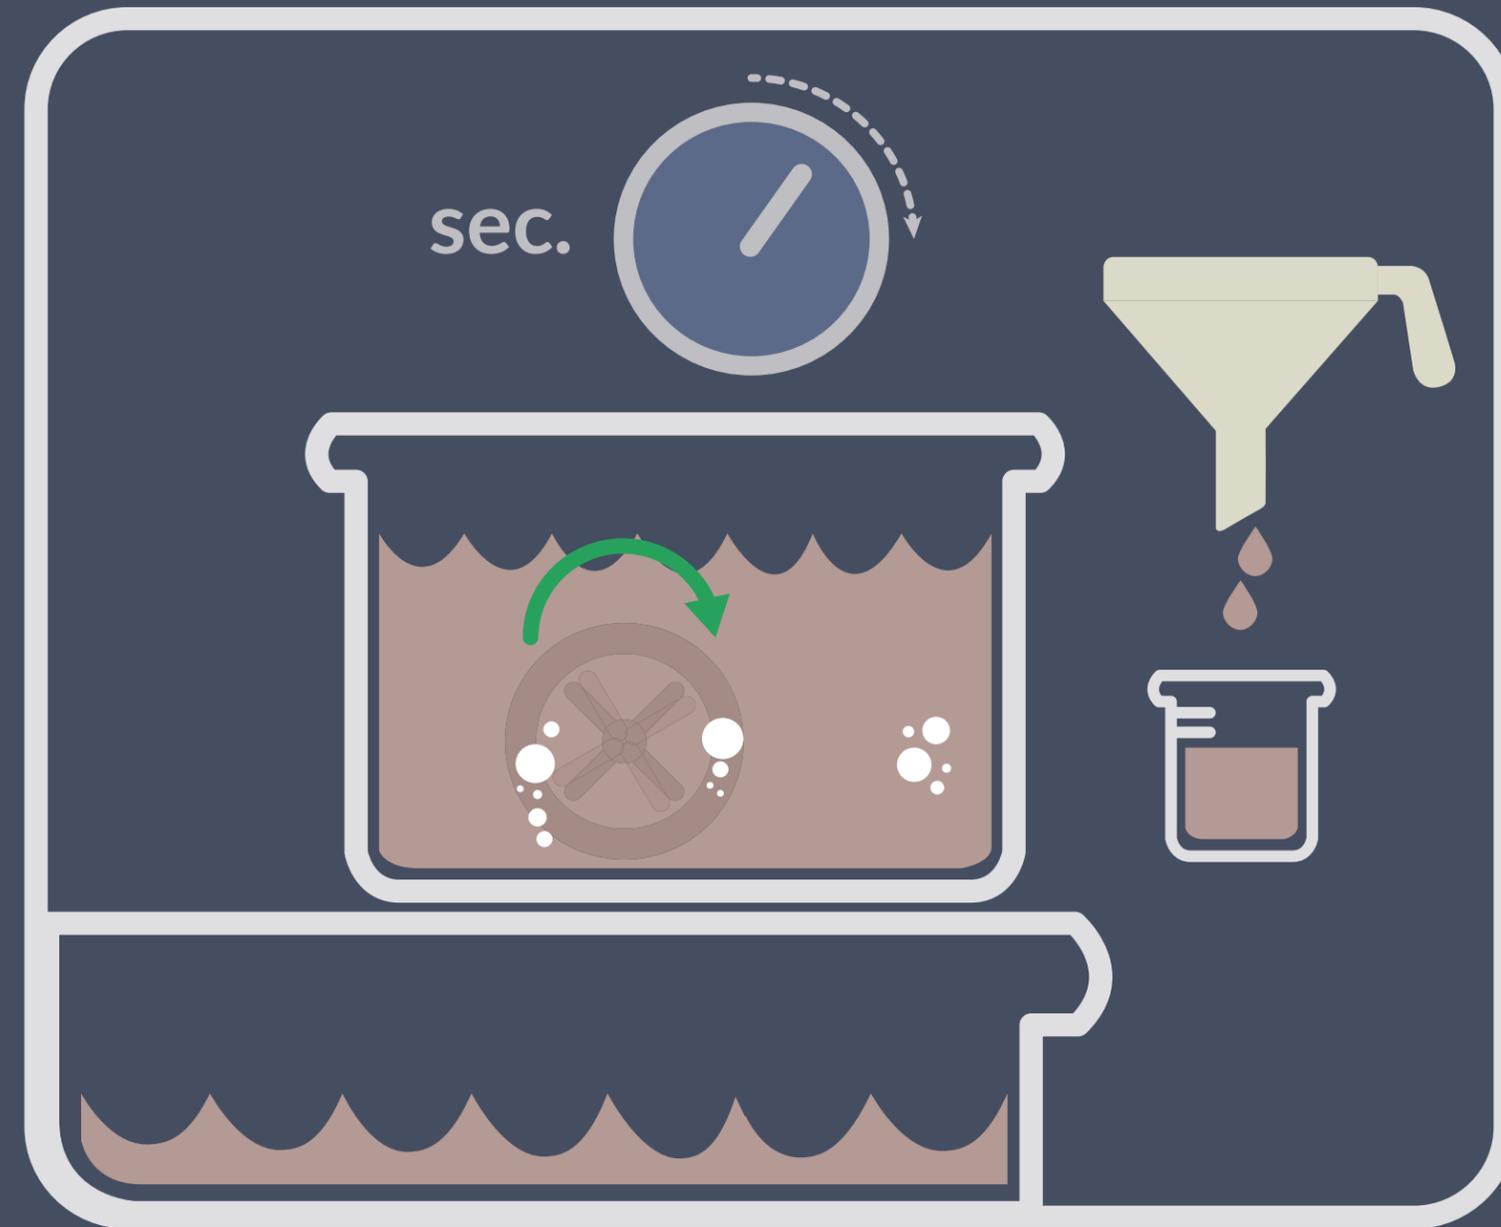

E. EMPTY THE MIX

Empty the mixing tank into the main tank (production tank) so you can pump the mix down the hole.

Start preparing the mud mix for the next shift.

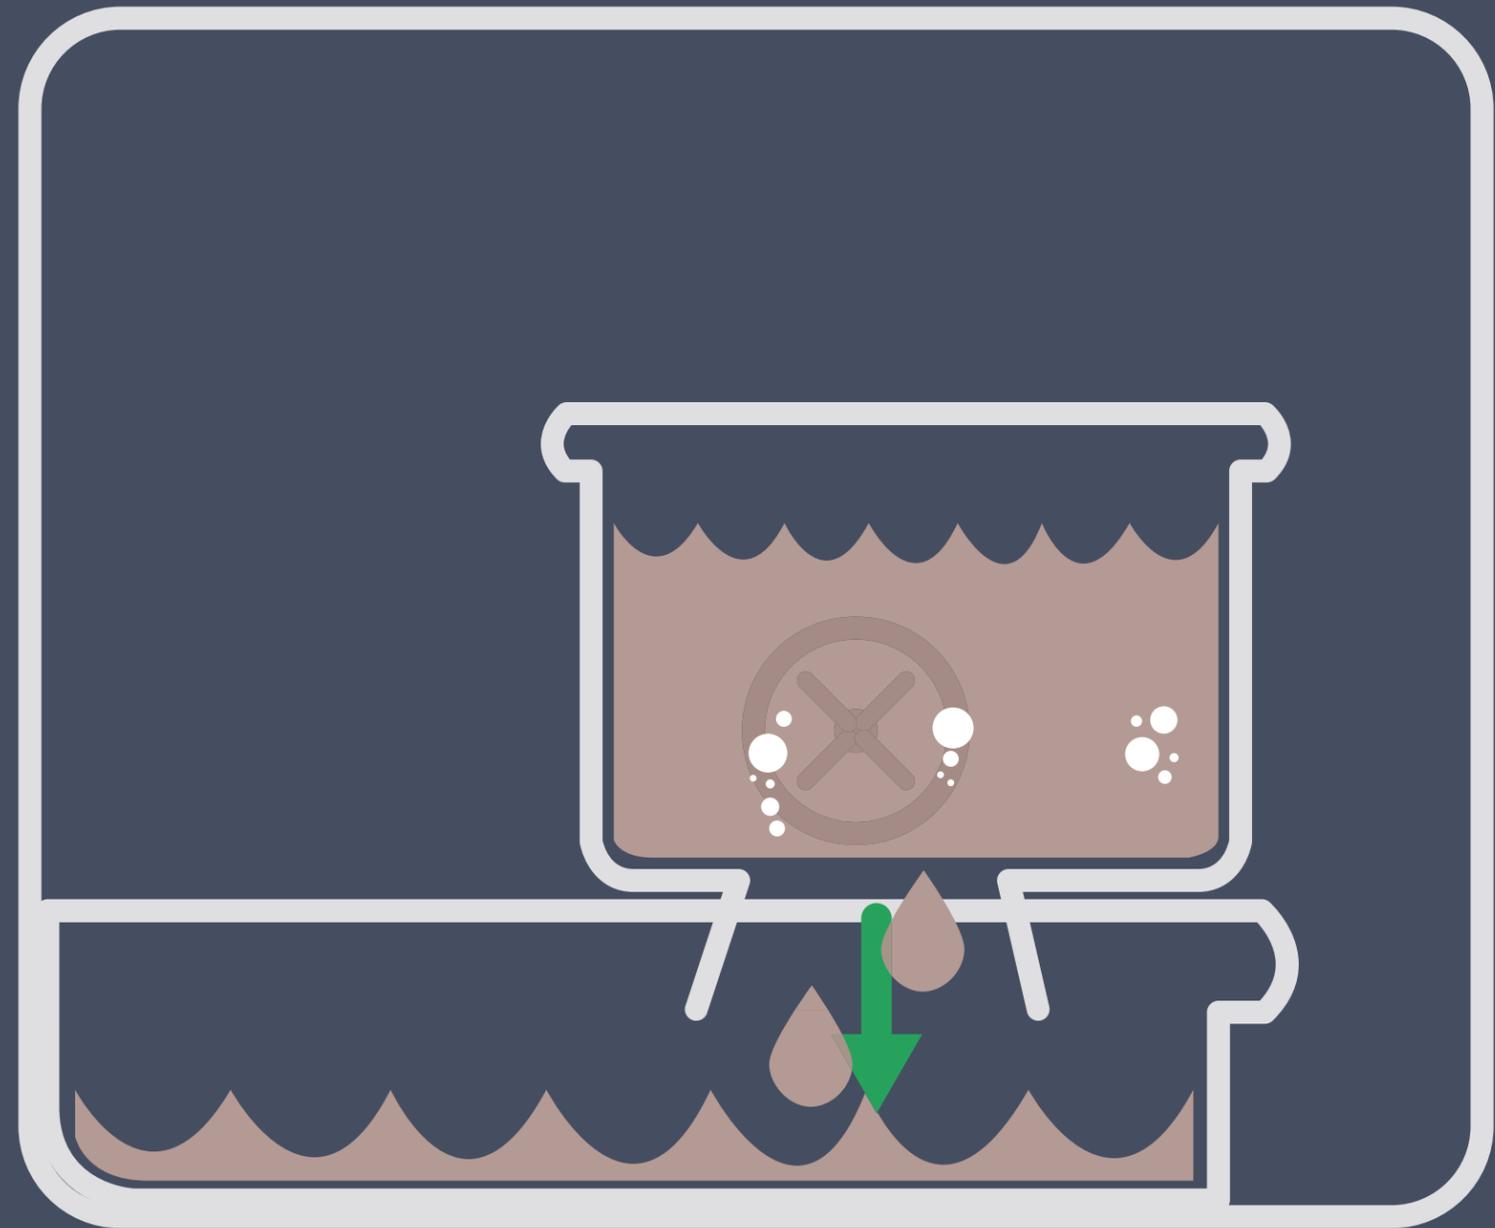

To learn more about how to properly mix drilling mud for sandy conditions, contact our [technical support team](#).

They can answer questions or arrange an onsite visit.



NEW

FREE DOWNLOAD

A simple and unique tool at your disposal, to guide you to know mixing drilling fluid additives.

[Download your guide now](#)