


White Rhino | TECHNICAL SHEET

How to pick the right *Inner Tube Extention*

Part number	Reaming shell	Extension length (shoulder to shoulder)
10A-092-0	BWL i/t ext for the 10"	3-9/16"
10A-094-0	BWL i/t ext for the 18"	11-13/16"
10A-193-0	BTW i/t ext for the 10"	3-3/4"
10A-150-0	BTW i/t ext for the 18"	11-5/8"
10A-146-0	BTW i/t ext for the 36"	28-3/8"
10A-079-0	NWL i/t ext for the 10"	3-1/4"
10A-097-0	NWL i/t ext for the 18"	11-5/8"
Z-DIVERS	NTW i/t ext for the 10"	3-1/8"
10S-N13-054-0	NTW i/t ext for the 18"	11-7/16"
10A-120-0	NWL2 i/t ext for the 10"	3-1/4"
10A-081-3	HWL i/t ext for the 10"	2-13/16"
10A-052-0	HWL i/t ext for the 18"	11-13/16"
Z-DIVERS	HWL i/t ext for the 36"	28"
Z-DIVERS	PWL i/t ext for the 10"	5"
10A-172-0	PWL i/t ext for the 18"	11-3/8"

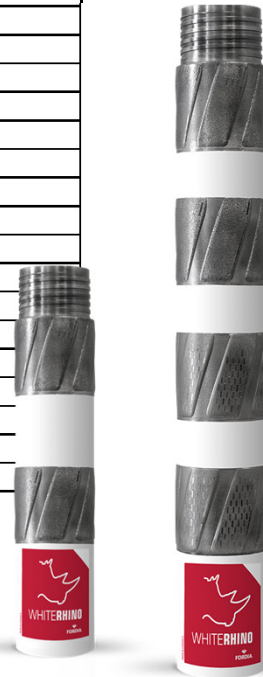

How to pick the right *Inner Tube Coupling*

Part number	Inner tube coupling	Extension length (shoulder to shoulder)
10S-B10-053-0	BWL	12 5/8"
10S-B13-053-0	BTW	12 7/8"
10S-B17-053-0	BWLTK	9"
10S-N10-053-0	NWL	14 1/4"
10S-N13-053-0	NTW	14 1/4"
10S-H10-053-0	HWL	16 5/16"



*The sizes below are when you add 2 10ft inner tubes together